

**G-PRO Tecnologia - 64.343.195 GIOVANNA DO VALE
LOPES ALVES S**CNPJ: 64.343.195/0001-55
Q QUADRA 6 CONJUNTO K, 22 - PARANOIA
Brasília/DF - CEP: 71570-611(61) 8352-6152 - (61)98352-6152
gpro.tecnologia@gmail.com
Vendedor: EDUARDA DO VALE**ORÇAMENTO Nº 1884****20/03/2026**

Apresentamos nossa proposta comercial relativa a solicitação de orçamento em epígrafe, assumindo inteira responsabilidade pelas informações aqui contidas. A G-Pro Tecnologia fornece seus produtos e presta seus serviços com responsabilidade técnica, estão inclusos no valor total os custos com impostos, encargos trabalhistas, fretes e demais despesas. Oferecendo assim com qualidade e garantia todos os seus produtos e serviços.

DOCUMENTOS DE HABILITAÇÃO G-PRO: <https://bit.ly/3OyHGgA>:**VALIDADE DA PROPOSTA: 60 DIAS**

Nº PREGÃO: 90023/2026

Nº UASG: 925866

DADOS DO CLIENTE

Razão social:	PROCURADORIA GERAL DE JUSTICA DO ESTADO DO AMAZONAS	Nome fantasia:	AM PROCURADORIA GERAL DA JUSTICA GAB DO PROCURADOR
CNPJ/CPF:	04.153.748/0001-85	Endereço:	AV CORONEL TEIXEIRA, 7995 - NOVA ESPERANCA
CEP:	69030-480	Cidade/UF:	Manaus/AM
Telefone:	(92)3655-0743	E-mail:	licitacao@mpam.mp.br

PRODUTOS

NOME	UND.	QTD.	VR. UNIT.	SUBTOTAL
Item 02 (Hi-Target V200) (Hi-Target V200) Equipamento receptor GNSS de alta precisão (similar/equivalente), com placa multiconstelação avançada para rastreamento global (GPS, GLONASS, Galileo, BeiDou). Receptor geodésico profissional ultracompacto, equipado com IMU, ideal para rastreamento rigoroso e coleta de Pontos de Controle Terrestre (GCPs). Acompanha software de coleta em campo (Hi-Survey) e licença de software de escritório (ex: Hi-Target Geomatics Office - HGO) para pós-processamento estático/cinemático e ajustamento de redes. Sistema com precisão RTK centimétrica e total suporte e integração nativa com o sistema de referência geocêntrico oficial brasileiro (SIRGAS2000). Fornecimento do "Kit RTK" completo contendo a antena receptora V200, controladora de dados original (ex: iHand55), cabos e software. Produto de importação oficial, devidamente certificado e homologado pela ANATEL para uso no Brasil. Homologação ANATEL n.º 11919-22-14053 (iHand 55) é o 11919-22-14053	UN	1,00	35.000,00	35.000,00
TOTAL		1,00		35.000,00

PRODUTOS: 35.000,00**TOTAL: R\$ 35.000,00**ANEXO: [Edital PE 23.2026.pdf](#)**OBSERVAÇÕES**PRAZO DE ENTREGA: CONFORME EDITAL
LOCAL DE ENTREGA: CONFORME EDITAL

DADOS BANCARIO:

Banco: 077 - BANCO INTERMEDIUM S.A

Agencia: 0001

Conta: 13002647-6

Pix: CNPJ: 64.343.195/0001-55

Obs.:

Alíquota de ICMS já embutida no valor total do produto. Somos optante pelo simples nacional:

Não haverá necessidade de emissão de Nota Fiscal de Remessa Em anexo certidões listadas solicitada

Caso necessário, emitimos NF de venda Futura

DECLARAÇÕES UNIFICADA – LICITAÇÃO / CHAMAMENTO PÚBLICO

RAZÃO SOCIAL: G-PRO Tecnologia CNPJ: 64.343.195/0001-55

ENDEREÇO: Q Quadra 6 Conjunto K, nº 22 – Paranoá - CIDADE/UF: Brasília/DF – CEP: 71570-611

A empresa G-PRO Tecnologia, devidamente inscrita no CNPJ nº 64.343.195/0001-55, com sede no endereço acima, por seu representante legal infra-assinado, declara, sob as penas da lei, para fins de participação em licitação/chamamento público, que:

1. Aceitação das Condições do Certame

Aceita, irrestritamente, todas as condições e exigências estabelecidas no Termo de Referência, edital e demais documentos que regem o presente certame.

2. Inexistência de Vínculo com a Administração

Não possui qualquer vínculo de natureza técnica, comercial, econômica, financeira ou trabalhista com servidor ou dirigente do órgão/entidade contratante.

3. Ausência de Vedações Legais

Declara que nem a empresa nem seus dirigentes incorrem nas vedações previstas no art. 39 da Lei nº 13.019/2014, conforme art. 26, inciso IX, do Decreto nº 8.726/2016.

4. Inexistência de Fatos Impeditivos

Até a presente data, inexistente qualquer fato impeditivo para sua habilitação, estando ciente da obrigatoriedade de declarar ocorrências supervenientes.

5. Autorização para Tratamento de Dados (LGPD)

Autoriza expressamente o tratamento de seus dados pessoais, sensíveis ou não, nos termos da Lei nº 13.709/2018 (Lei Geral de Proteção de Dados).

6. Proibição de Trabalho Infantil

Declara, para fins do disposto no art. 68, inciso VI, da Lei nº 14.133/2021, e em conformidade com o art. 7º, inciso XXXIII, da Constituição Federal, que:

Não emprega menores de 18 anos em trabalho noturno, perigoso ou insalubre;

Não emprega menores de 16 anos, salvo na condição de aprendiz, a partir dos 14 anos;

Não utiliza mão de obra infantil, conforme Lei Distrital nº 5.061/2013.

7. Composição dos Custos da Proposta

Suas propostas econômicas compreendem a integralidade dos custos necessários ao cumprimento dos direitos trabalhistas, previdenciários, fiscais e comerciais.

8. Enquadramento no Simples Nacional

É optante pelo Simples Nacional, nos termos da Lei Complementar nº 123/2006, não estando sujeita à retenção de IRPJ, CSLL, PIS/Pasep e COFINS, conforme art. 64 da Lei nº 9.430/1996.

9. Reserva de Cargos – PCD e Reabilitados

Cumprir as exigências de reserva de cargos para pessoas com deficiência e reabilitados da Previdência Social, conforme art. 63, IV, da Lei nº 14.133/2021.

10. Sustentabilidade Ambiental

Atende aos critérios de sustentabilidade socioambiental, respeitando as normas de proteção ao meio ambiente, conforme a Instrução Normativa SLTI/MPOG nº 01/2010.

11. Combate à Discriminação

Não foi condenada, nem seus dirigentes, por práticas discriminatórias, conforme:

Constituição Federal de 1988 (arts. 3º, IV e 5º, I);

Lei nº 12.288/2010 (Estatuto da Igualdade Racial).

12. Não Exploração de Trabalho Análogo ao de Escravo

Declara que não explora trabalho análogo ao de escravo ou tráfico de pessoas, conforme:

Arts. 149, 203 e 207 do Código Penal;

Constituição Federal, arts. 1º e 170;

Convenções OIT nº 29 e 105 e Protocolo de Palermo.

13. Declaração de Idoneidade

Declara que não foi declarada inidônea para licitar ou contratar com a Administração Pública, nos termos da legislação vigente.

14. Inexistência de Impedimento para Contratar

Declara que não se enquadra em nenhum dos impedimentos previstos na Lei nº 14.133/2021 para contratar com o Poder Público.

15. Compromisso Anticorrupção

Compromete-se a agir de acordo com os princípios da legalidade, moralidade e boa-fé, não oferecendo ou aceitando vantagens indevidas, conforme a Lei nº 12.846/2013 (Lei Anticorrupção).

Por ser expressão da verdade, firma a presente declaração para que produza seus efeitos legais.

GIOVANNA DO VALE LOPES
Diretora do Comercial

Assinatura do cliente



TABELA DE CONFORMIDADE TÉCNICA

Exigência Mínima do Edital (TJAM)	Especificação Ofertada pela G-PRO (Hi-Target V200)	Atende?
<p>Referência: Receptor GNSS RTX/RTK Trimble R980 ou similar.</p>	<p>Equipamento receptor GNSS de alta precisão (similar/equivalente), com placa multiconstelação avançada para rastreamento global (GPS, GLONASS, Galileo, BeiDou).</p>	SIM
<p>Aplicações: Levantamento geodésico e controle de pontos de apoio (GCPs).</p>	<p>Receptor geodésico profissional ultracompacto, equipado com IMU, ideal para rastreamento rigoroso e coleta de Pontos de Controle Terrestre (GCPs).</p>	SIM
<p>Processamento e Software: Software especializado para processamento estático e cinemático (RTK/PPK), cálculo de linhas de base, ajustes de redes e transformação de coordenadas.</p>	<p>Acompanha software de coleta em campo (Hi-Survey) e licença de software de escritório (ex: Hi-Target Geomatics Office - HGO) para pós-processamento estático/cinemático e ajustamento de redes.</p>	SIM
<p>Padrões Geodésicos: Assegurando compatibilidade com os padrões do SIRGAS2000 e precisão centimétrica.</p>	<p>Sistema com precisão RTK centimétrica e total suporte e integração nativa com o sistema de referência geocêntrico oficial brasileiro (SIRGAS2000).</p>	SIM
<p>Kit Completo: O kit deve incluir antenas, controladora, cabos e software de processamento.</p>	<p>Fornecimento do "Kit RTK" completo contendo a antena receptora V200, controladora de dados original (ex: iHand55), cabos e software.</p>	SIM
<p>Certificações: Homologação e normativas brasileiras.</p>	<p>Produto de importação oficial, devidamente certificado e homologado pela ANATEL para uso no Brasil.</p>	SIM



Brasília/DF, 20 de março de 2026.

GIOVANNA DO VALE LOPES ALVES SALES

Representante Legal G-PRO Tecnologia - 64.343.195 GIOVANNA DO VALE

LOPES ALVES SA

CNPJ: 64.343.195/0001-55



V200 GNSS RTK System
User Manual

Manual Revision

Revision Date	Revision Level	Description
July. 2021	1	V200 GNSS RTK System User Manual

V200

GNSS RTK System

User Manual



Preface

Introduction

Welcome to the Hi-Target V200 receiver. This introduction describes how to use this product.

Experience requirement

To help you use the Hi-Target series products better, Hi-Target suggests that you read the instructions carefully. If you are unfamiliar with the products, please refer to www.hi-target.com.cn

Tips for safe uses



Notice: The contents here are special operations and need your special attention. Please read them carefully.



Warning: The contents here are generally very important as the wrong operation may damage the machine. This can lead to the loss of data, or even break the system and endanger your safety.

Exclusions

Before using the product, please read these operating instructions carefully, as they will help you to use it better. Hi-Target Surveying Instrument Co. Ltd assumes no responsibility if you fail to operate the product according to the instructions, or operate it wrongly because you have misunderstood them.

Hi-Target is committed to constantly perfecting the product's functions and performance, improving its service quality, and reserves the right to change these operating instructions without notice.

We have checked the contents of the instructions and the software & hardware without eliminating the possibility of deviation. The pictures in the operating instructions are for reference only. In the case of non-conformity with products, the products shall prevail.

Technology and service

If you have any technical issues, please call the Hi-Target technology department for help, and we will answer your question.

Relevant information

You can obtain this introduction by:

Purchasing Hi-Target products: this manual is found in the instrument container and will help you to operate the instrument.

Logging on to the Hi-Target official website and downloading the electronic version of this introduction from *Partner Center*: <http://members.hi-target.com.cn/>

Advice

If you have any suggestions for this product, please email them to: sales@hi-target.com.cn. Your feedback information will help us to improve the product and service.

Contents

Preface	I
Introduction	I
Experience requirement	I
Tips for safe use	I
Exclusions.....	I
Technology and service.....	II
Relevant information.....	II
Advice	II
Contents	III
Chapter 1	1
Overview	1
1.1 Foreword	2
1.2 Features	2
1.3 Use and precautions	2
Chapter 2	3
Product introduction	3
2.1 Overall appearance	4
2.1.1 Upper cover	4
2.1.2 Bottom cover.....	4
2.1.3 Control cover.....	5
2.2 Button & LED.....	6
2.2.1 Button function.....	6
2.2.2 LED	6
2.3 WEB management system.....	7
2.3.1 Main menu	7
2.3.2 Information	9
2.3.3 Work mode.....	12
2.3.4 File manager	13
2.3.5 Firmware	14
2.3.6 System	15
2.4 Static survey	17
2.4.1 Static settings.....	17
2.4.2 Static data collection steps	17

2.5 Tilt survey	20
2.5.1 Calibration-free tilt survey	20
2.6 Firmware upgrade	21
2.6.1 Upgrade by USB cable	21
2.6.2 Upgrade by using the web management system	22
Chapter 3	23
Technical specification	23
Chapter 4	26
Accessories and interfaces	26
4.1 Data cable	27
4.2 Antenna	27
4.3 Battery	27

Chapter 1

Overview

This chapter contains:

- Foreword
- Features
- Use and precautions

1.1 Foreword

V200 GNSS RTK receiver brings superior performance and high efficiency that will support your fieldwork with reliable solutions. Its deployment of the advanced RTK engine and new-generation IMU guarantees a 25% performance improvement even in the most demanding environments. Thus you can count on Hi-Target V200 to provide you with better productivity.

1.2 Features

1. Its more durable and portable with an ultra-light EPP material instrument case.
2. It can bring accurate and reliable results and boost efficient fieldwork with a self-developed built-in IMU and core algorithm.
3. Equipped with the High-performance Patch Antenna, it both enhances the low elevation angle tracking capabilities and maintains a high gain for higher elevation satellites.
4. It does not provide overly optimistic coordinate quality and guarantees the high reliability of RTK fixed positions, improving accuracy better than 8 cm by 20 %.
5. Hi-Fix technology enables both continuous connectivity and quality results.

1.3 Use and precautions

The V200 GNSS receiver is designed to have chemical and impact resistance, but precision instruments require careful use and maintenance.



Notice: The receiver must be within the specified temperature range when it is used and stored. For detailed requirements, please refer to Chapter 3: Technical specification.

In order to ensure the continuous tracking observation of the satellite and quality of the satellite signal, the space above the station should be as wide as possible, with no obstacles above the 15° elevation angle. To reduce the interference of various electromagnetic waves on the GNSS satellite signal, there should be no strong electromagnetic interference within a range of about 200m around the station, such as TV towers, microwave stations, and high-voltage transmission lines. To avoid or reduce the occurrence of multipath effects, the station should be away from terrain and features with strong reflectors, such as high-rise buildings, water, etc.

Chapter 2

Product introduction

This chapter contains:

- Overall appearance
- Button & LED
- WEB management system
- Static survey
- Tilt survey
- Firmware upgrade

2.1 Overall appearance

The product's appearance is divided into three parts, including the upper cover, bottom cover and control panel.



Figure 2-1-1

2.1.1 Upper cover



Figure 2-1-2

2.1.2 Bottom cover

The bottom cover includes the SMA antenna interface, Type-C USB interface.



Figure 2-1-3

1. SMA antenna interface 2. Connection screw 3. Speaker 4. Type-C USB interface

◇ SMA antenna interface: Connect the radio antenna while using the *Internal UHF* mode.

◇ Type-C USB interface: To upgrade the firmware and download static data.

◇ Protective plug: Used for dustproof and waterproof sockets.



Notice:

1. If you don't use the SMA antenna interface and USB interface, please cover the rubber plug to protect them from dust and water.
2. When the speaker is flooded, the sound may be silent or hoarse, but it will return to normal after it has dried.

2.1.3 Control cover

The control panel includes a satellite light, power button and data light.



Figure 2-1-3

1. Satellite LED 2. Power button 3. Data LED




2.2.1 Button function


Table 2-2-1 Button function description

Function	Description
Power-on	Long press the power button for 1 second.
Power-off	In the power-on state, long press the power button for more than 3 seconds but less than 6 seconds.
Forced shutdown (use when the device crashes)	Press the power button for at least 12 seconds.
Query current status	Press the power button once to voice the product's current working status.
Reset motherboard	When the device is powered on, long press the power button for 6 seconds and release it after hearing the second "dingdong" sound.
Switch working mode	Double-click the power button to enter the mode switch. After each double-click, switch to a working mode, and click the power button to confirm it.
One-key setting station	When the device is powered off, long press the power button for 6s to turn it on.

2.2.2 LED

Table 2-2-2 LED function description

Function	Status	Description
 Power LED(red)	Long-term lighting	When the device is powered off, it is for charging the device.
	OFF	It is not charging nor fully charged.
 Power LED(green)	Flash	The power $\leq 10\%$.
	Long-term lighting	1. RTK mode: No correction data. 2. Static mode: Sampling has not started.
	Flash	1. RTK mode: Flashes at the frequency of the correction transmit and receives. 2. Static mode:

Data LED		Sampling interval >1s: Flashes at the sampling interval. Sampling interval ≤1s: Flashes once per second.
	Off	1. RTK mode: No correction data. 2. Static mode: Sampling has not started.
 Satellite LED	Long-term lighting	Satellite is tracked.
	Flash	Satellite is not tracked.

2.3 WEB management system

V200 has a built-in web management system that can be used to set the receiver's working mode, data output, as well as view receiver information and satellite information. The receiver's Wi-Fi name is its S/N. You can connect it to a controller or phone (the default password is: 12345678) and then input the IP address *192.168.20.1* into the browser to log onto the web management system.

Note: The web management system can only be visited when the receiver's Bluetooth isn't connected.

2.3.1 Main menu

After logging into the web management system, you can click Start to enter the main menu interface. Each option of the main menu contains drop-down menus.



Figure 2-3-1 Home



Figure 2-3-2 Main menu

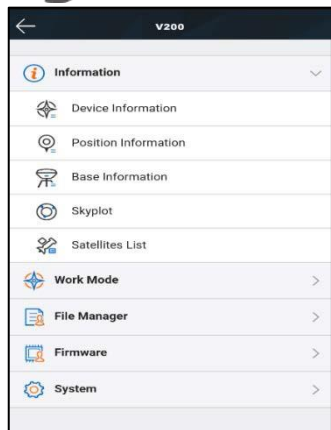


Figure 2-3-3 Information

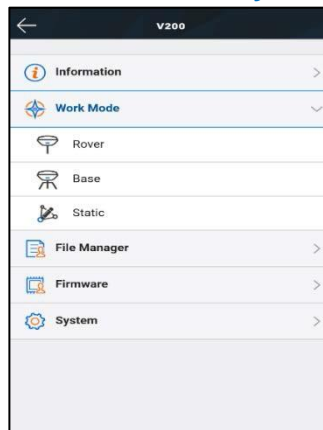


Figure 2-3-4 Work mode

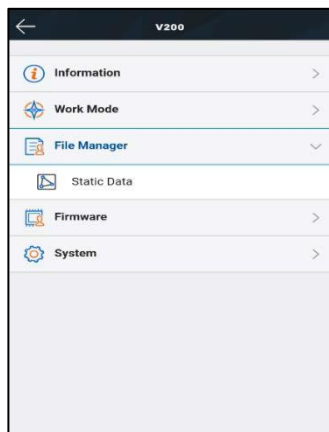


Figure 2-3-5 File manager

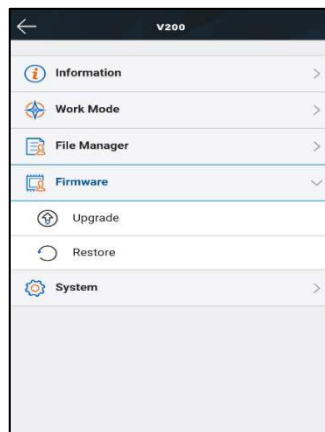


Figure 2-3-6 Firmware

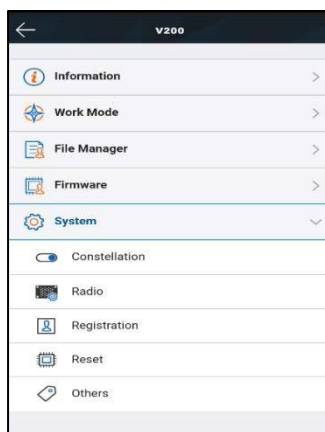


Figure 2-3-7 System

Table 2-3-1 Menu description

Main menu	Sub-menu	Description
Information	Device info	Device model, version, registration info, etc.
	Position info	Coordinates, satellite tracking, solution state, etc.
	Base info	Coordinates and distance to the base
	Sky plot	Check the sky plot
	Satellites list	Satellite tracking information
Work mode	Rover	Data link and parameter settings of the rover
	Base	Data link and parameter settings of the base
	Static	Static measurement parameter settings
File manager	Static data	Download, delete and format static data
Firmware	Upgrade	Select and upgrade the firmware
	Restore	Restore the system
System	Constellation	The satellite tracking switches
	Five-pin port	Output settings of the five-pin
	Radio	Radio frequency list
	Reset	Reset the motherboard
	Registration	Device registration and information
	Others	Switch of the static RINEX and volume control, etc

2.3.2 Information

1. Device information

Includes the main information about the device: device model, S/N, firmware version, OEM info, battery power, work mode, configuration parameters, etc.


Figure 2-3-8 Device information

2. Position information

Includes the device's position, satellites, solution state, latency, PDOP and time, etc.



Figure 2-3-9 Position information

3. Base information

Includes the coordinates and distance of the base in the rover mode.



Figure 2-3-10 Base information

4. Sky plot

Displays the visual satellites of the device and the switches of each constellation.


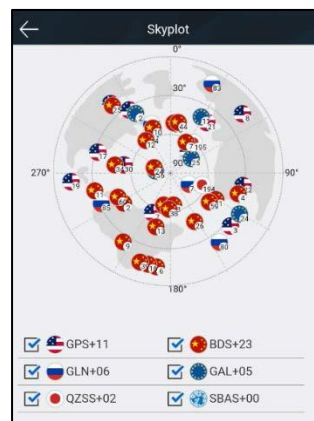


Figure 2-3-11 Sky plot

5. Satellites list

Shows the satellite's tracked information.

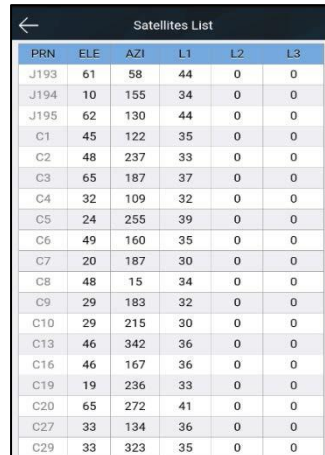

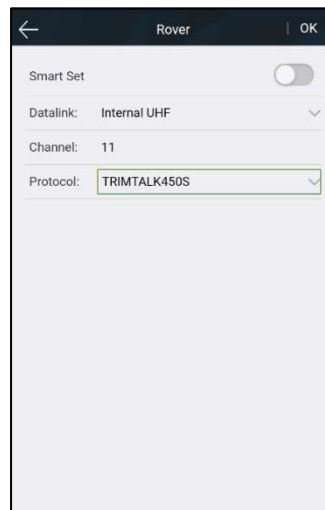
PRN	ELE	AZI	L1	L2	L3
J193	61	58	44	0	0
J194	10	155	34	0	0
J195	62	130	44	0	0
C1	45	122	35	0	0
C2	48	237	33	0	0
C3	65	187	37	0	0
C4	32	109	32	0	0
C5	24	255	39	0	0
C6	49	160	35	0	0
C7	20	187	30	0	0
C8	48	15	34	0	0
C9	29	183	32	0	0
C10	29	215	30	0	0
C13	46	342	36	0	0
C16	46	167	36	0	0
C19	19	236	33	0	0
C20	65	272	41	0	0
C27	33	134	36	0	0
C29	33	323	35	0	0

Figure 2-3-12 Satellites list

2.3.3 Work mode

1. Rover

Set up the rover's data link and parameters. The rover station data link includes: *Internal UHF*.


Figure 2-3-13 Rover

2. Base

Set up the data link and parameters of the base and get the point coordinates by averaging. The base station data link mode includes: *Internal UHF*.

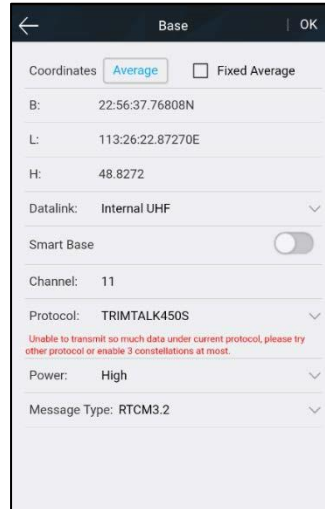


Figure 2-3-14 Base

3. Static

Set up the file name and parameters of the static collection.

Note: After ticking *Static Mode*, you can only cancel it in the base rover setting interface.

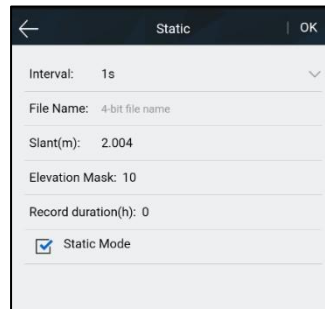


Figure 2-3-15 Static

2.3.4 File manager

1. Static data

Display the static data files, which supports the Download, Delete and Format options.

Note: After checking the "Static Mode", you can only uncheck the "Static Mode" in the base station mode or rover mode.



<input type="checkbox"/>	Name	Modified	Size
<input type="checkbox"/>	test1670.GNS	06/16 02:05	301.27K
<input type="checkbox"/>	17691675.GNS	06/16 02:02	260.71K
<input type="checkbox"/>	17691670.GNS	06/16 02:00	51.93K
<input type="checkbox"/>	17691674.GNS	06/16 02:00	672B
<input type="checkbox"/>	17691673.GNS	06/16 01:59	672B
<input type="checkbox"/>	17691672.GNS	06/16 01:59	672B
<input type="checkbox"/>	17691671.GNS	06/16 01:59	672B
<input type="checkbox"/>	12341670.GNS	06/16 01:59	672B

Figure 2-3-16 Static data

2.3.5 Firmware

1. Upgrade

Display specific device version information. Click Select, choose the upgrade package and then click Start. The receiver will automatically detect it and upgrade the firmware.



Host Version:	V2.1.0
System Version:	V1.6.0
Radio Type:	M10_TR4602_B
Radio Version:	v1.1.0
INS Version:	10.4.0.0
File Name:	
Type:	

Figure 2-3-17 Upgrade

2. Restore

You can restore the system to its state after the last firmware upgrade.



Figure 2-3-18 Restore

2.3.6 System

1. Constellation

Switches of the satellite tracking.

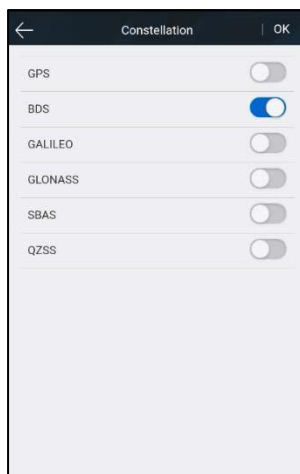


Figure 2-3-19 Constellation

2. Radio

You can select the radio modulation protocol (HI-TARGET19200, HI-TARGET9600, TRIMTALK450S, TRIMTALK III, SATEL-3AS, SOUTH19200, SOUTH9600, CHC19200, CHC9600, TRANSEOT).

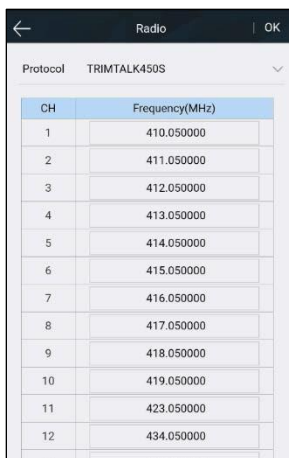
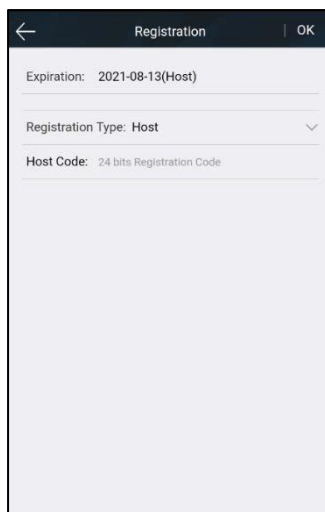


Figure 2-3-20 Radio


3. Registration

Display the registration information of the receiver. You can select the registration type, and then enter the corresponding code to register online.

*Figure 2-3-21 Registration*

4. Reset

Reset the motherboard.

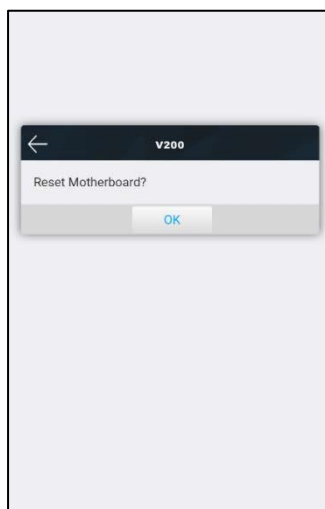*Figure 2-3-22 Reset*

5. Others

You can set the switches of the Store RINEX Data and Check Base Position, select the RINEX version, and adjust the voice volume of the receiver.

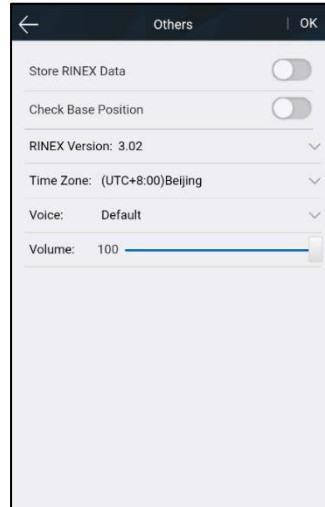


Figure 2-3-23 Others

2.4 Static survey

Static survey is a kind of positioning survey, which is mainly used to establish various control networks.

2.4.1 Static settings

There are two ways to set up the device to work in the static mode:

1. Hi-Survey Road software – static interface – to set up the static or temporary static mode.
2. Web interface – work mode – to set up the static or temporary static mode.

Users can download the static data file to the computer, if necessary, and then use the static post-processing software (HBC data processing software package) to process the data.

2.4.2 Static data collection steps

1. Set up the receiver on a control point with a tripod, making sure the tripod is strictly centered and leveled. The benchmark must be installed.
2. Measure the slant height of the receiver three times in three directions, ensuring that the difference of each measurement is less than 3mm, and then take the average value as the final height. The slant height of the receiver is measured from the center of the measuring point to the upper part of the top of the benchmark.

(Note: The radius of the benchmark is 0.130m, and the benchmark's distance from the phase center of the receiver is 0.0848m.)

3. Record the point name, S/N, receiver height and beginning time.
4. Press the power button to power-on and set up the static collecting mode.
5. Turn off the receiver after the static data is collected and record the turn-off time.
6. Download and post-process the static collection data.

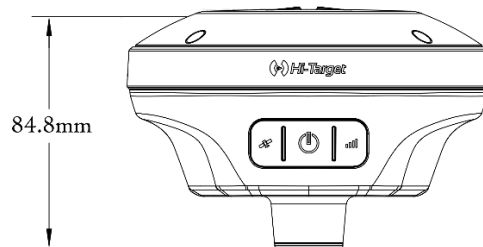


Figure 2-4-1



Notice: Don't move the tripod or change the collecting set while the receiver is collecting data.

2.4.3 Static data download

1. Download by USB cable

Connect the receiver to a computer with the Type-C USB cable and copy the static data to the computer. The static data is in the GNSS folder of the static drive.

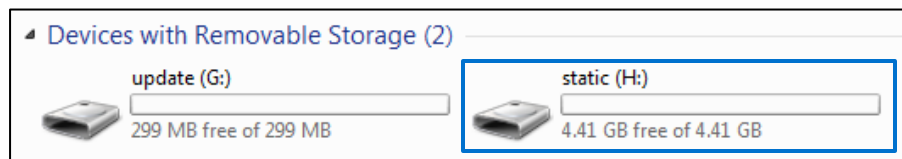


Figure 2-4-2

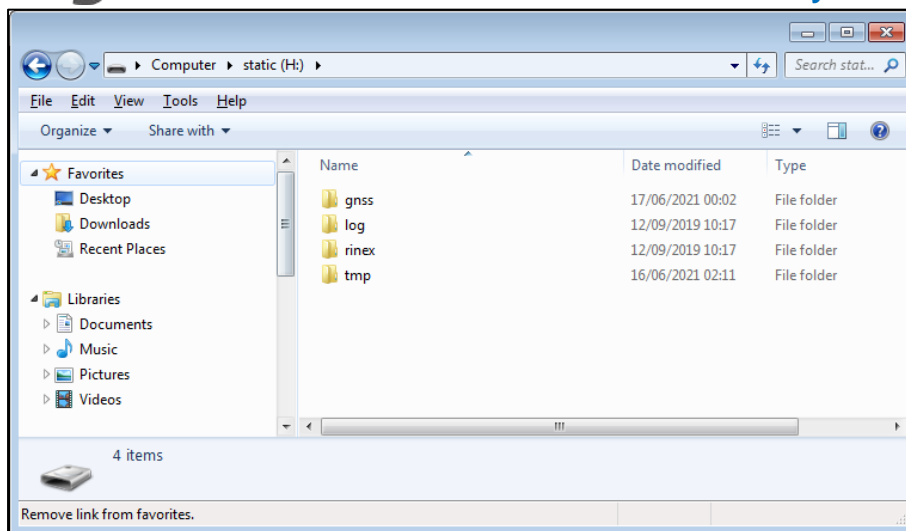


Figure 2-4-3

2. Download in the web management system

The Wi-Fi name of the receiver is its S/N. You can connect it to a controller or phone (the default password is: 12345678) and then input the IP address 192.168.20.1 into the browser to log into the WEB management system. Now, open the file manager interface and select the static file that needs to be exported. Click Download and the file can be downloaded to the controller or phone.

The default save path of the static data to be downloaded from the website is: device internal storage > MyFavorite. You can customize the save path according to your needs.

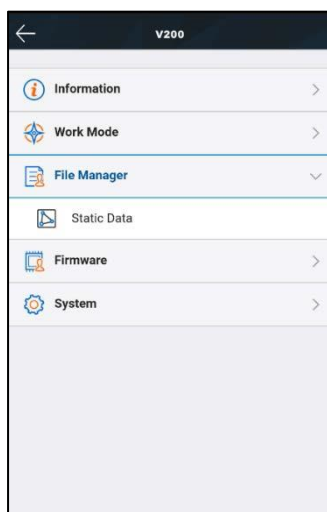


Figure 2-4-4



Figure 2-4-5

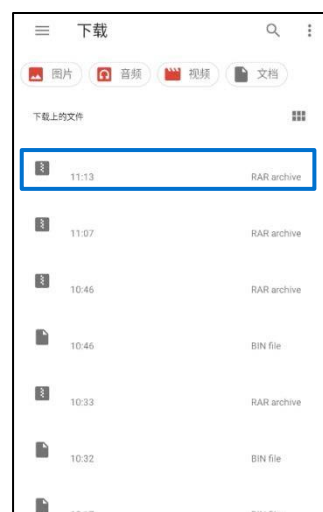


Figure 2-4-6

2.5.1 Calibration-free tilt survey

Connect the receiver in the Hi-Survey Road software to open the Tilt Survey in the Survey → Surveying Configure → Data interface. Click the Tilt Survey icon and follow the prompt on the Hi-Survey Road interface to finish the initialization.

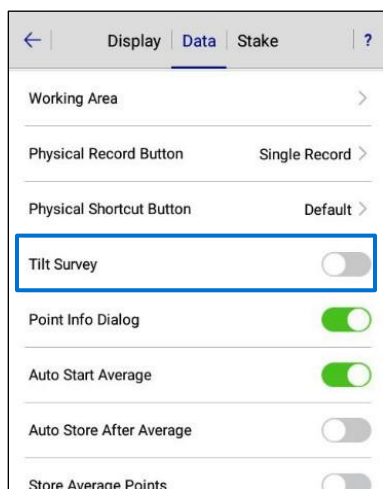


Figure 2-5-1

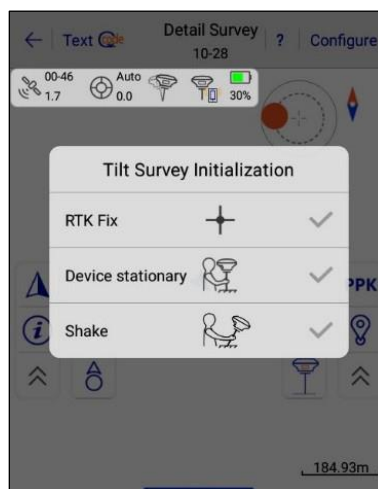


Figure 2-5-2

1. Device stationary

When the receiver gets the fixed solution, keep the receiver static until Device stationary is marked with

2. Shake

After Device stationary is finished, shake the receiver back and forth (once every second) for initialization until Shake is marked with

When all of the initialization items are ticked, the receiver prompts “Tilt compensation started” and the tilt survey icon becomes illuminated. This means that the tilt survey initialization is now complete and you can perform the tilt survey on the receiver.

**Notice:**

1. Make sure the actual pole height is consistent with the set pole height before the tilt survey.
2. When turning on the Tilt Survey switch, you will need the initialization operation before normal use.
3. To meet most the users' operational needs, the maximum measurement angle of the tilt survey is 70°.
4. To ensure the measurement accuracy, do not turn the device quickly during the measurement process.
5. The data quality is not good in the occluded environment. If the accuracy requirements are high, please try to use this function in an open environment.
6. When you enter the tilt survey for the first time every 7 days, you need to complete the static calibration according to the prompts. Just let the device stand for about 10s to complete this.

2.6 Firmware upgrade

You can upgrade the firmware of the receiver, motherboard and module by using a USB cable, the web management system and remote online.

2.6.1 Upgrade by USB cable

Steps to using a USB cable in order to upgrade the firmware:

1. Turn on the receiver and connect the receiver and the computer with the cable attached. This will show the update drive.
2. Copy the firmware (which can be downloaded from our official website or the technical team) to the update drive. Disconnect the computer and receiver and restart the receiver, which automatically recognizes the firmware and starts upgrading the firmware.
3. There will be different prompt voices for the success or failure of the upgrade. If it fails, please contact our technical team.

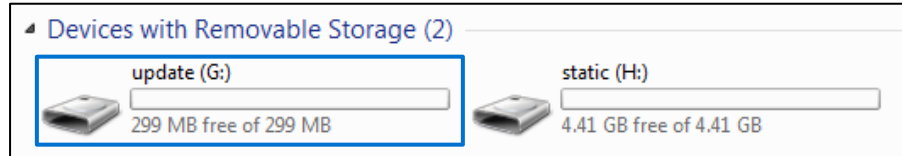


Figure 2-6-1

2.6.2 Upgrade by using the web management system

Copy the firmware to the controller or phone and use Wi-Fi to connect it to the receiver. The name of the Wi-Fi is the device's S/N. Now, input 192.168.20.1 to log in, click Firmware upgrade - Select - File to choose the firmware, and then click start to upgrade it.



Notice:

1. When the download fails, it will resume downloading if the network recovers within two minutes; otherwise, it will exit the firmware upgrade detection.
2. It will not forcibly power-off during the upgrade. If the power is forcibly cut off, the instrument may be damaged and become abnormal.

Chapter 3



Technical specification

This chapter contains:

- Technical specification

Table 3-1-1 Technical parameters

Configuration		Detailed Indicators		
GNSS configuration	Satellite signals tracked simultaneously	GNSS	GNSS Signal Designations	RNSS Frequency Band (MHz)
		BDS	B1I	1 559 to 1 610
		Galileo	E1	1 559 to 1 610
			E5a	1 164 to 1 215
			E5b	1 164 to 1 215
			E6	1 215 to 1 300
		GLONASS	G1	1 559 to 1 610
			G2	1 215 to 1 300
		GPS	L1	1 559 to 1 610
			L2	1 215 to 1 300
L5	1 164 to 1 215			
SBAS	L1	1 559 to 1 610		
	L5	1 164 to 1 215		
	Output format	ASCII: NMEA-0183, Binary data		
	Positioning output	1~20Hz		
	Static data format	GNS and RINEX		
	Message type	CMR, RTCM3.0, RTCM3.2		
System configuration	Operating system	Linux system and Soc processor		
	Data storage	8G internal storage		
Accuracy and reliability ^[1]	RTK position precision	Horizontal: $\pm (8+1 \times 10^{-6}D)$ mm (D is the distance between measurement points)		
		Vertical: $\pm (15+1 \times 10^{-6}D)$ mm (D is the distance between measurement points)		
	Static measurement precision	Horizontal: $\pm (2.5+0.5 \times 10^{-6}D)$ mm (D is the distance between measurement points)		
		Vertical: $\pm (5+0.5 \times 10^{-6}D)$ mm (D is the distance between measurement points)		
Tilt survey	Accuracy	Horizontal: 8mm+1ppm+0.8mm/°		
	Static keep time	> 40 seconds		
	Start method	Rotated shake		
Data communication	Wi-Fi	802.11 b/g/n Wi-Fi frequency is 2412-2472MHz, max output power: 15.42dBm e.i.r.p		
	Bluetooth	Bluetooth® 4.1, frequency 2402-2480Mhz, max output power: 8.54dBm e.i.r.p		
	NFC passive tag	13.56Mhz		
		Frequency: 410MHz~470MHz		
		Max Power: 32.89dBm (conducted)		

	Internal UHF	Protocol: HI-TARGET, TRIMTALK450S, TRIMMARK III, TRANSEOT, SATEL-3AS, CHC, SOUTH
		Channels: 116 totally, 100~115 configurable
		External antenna Max gain 5.0dBi
User interface	Button	Power button*1
 <p>Notice : Recommend a separation distance of 0.31m or more should be maintained between this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.</p>		
 <p>Notice : The product shall not be permanently installed outdoor because protection against water and dust is not guaranteed Please bring back to indoors in rainy weather.</p>		
<p>Notice : this device needs a license from the national regulatory authority before can be put into service.</p>		

	LED prompt light	3 LED lights, Satellite light, Data light, Power button
WEB UI	WEB website	Internal WEB, Receiver settings, Status checking
Output Port	Radio antenna port	1, SMA port, connect the antenna
	USB port	1, Type-C USB port, firmware upgrade and static data download
Physical	Internal battery	Capacity: 6800mAh/7.2V, Rover >10 hours ^[2]
	Charge time	≤7.0 hours
	Size	132mm*67mm (without battery cover)
	Weight	≤0.82kg
	Power consumption	4.2 W
Environment	Drop test	1.2m free drop & 2m centering rod drop
	Salt mist	Alternating salt fog 96 hours
	Operation temperature	-30°C ~ +45°C


Notice:

1. The device's precision is down to many factors, as it contains number of satellite, geometric distribution, observation time, atmosphere and multipath effect etc.
2. Battery working time is related to the work environment, working temperature and battery life.

Chapter 4

Accessories and interfaces

This chapter contains:

- Data cable
- Antenna
- Battery & charger

4.1 Data cable

Type-C cable: To connect the receiver to the PC for upgrading the firmware and downloading static data.



Figure 4-1-1 Type-C cable

4.2 Antenna

The UHF radio antenna is used in the Internal UHF mode.



Figure 4-2-1 UHF radio antenna

4.3 Battery

1. Battery: The receiver has a built-in 6800mAh/7.2V battery.



Notice:

If the battery needs to be stored for a long time, it should be charged to about 70% and then placed in a dry, low temperature environment. It is recommended that you charge and discharge the battery every 3 months. If you do not have the conditions that are needed for charging and discharging, take out the battery after 3 months and charge it to about 70% before storing it once more.

2. Charger: To charge the receiver, use the standard charger. When it is in charge, the power button light will turn red.



Figure 4-3-1 charger



Notice: Please use this product's standard charger to charge the receiver. We will not be responsible for any accidents that occur during the charging process or any damage to the instrument if you use other chargers instead.



Notice:

The product is in conformity with the basic requirements of the applicable European directives. This is confirmed by the marking (CE) of the installed components. The Declarations of Conformity of the installed components may be viewed upon request.

Within the scope of the European Directive 2014/53/EU, the network operator must ensure that the health and safety of the product user and other persons (Article 3 (1)a of 2014/53/EU and 1999/519/EC) are guaranteed. With respect to the exposure of people to electromagnetic fields, product standard EN 62311 must be applied.

This equipment complies with radiation exposure limits set forth for an controlled environment. This equipment should be installed and operated with minimum distance 1m between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Europe Importer: _____

Address of Importer: _____



§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.